



IRay Technology Co., Ltd.

Add: 11th Guiyang Street, YEDA, Yantai, P.R. China

Tel: 0086-400-998-3088

Email: [infiRayoutdoor@infiRay.com](mailto:infiRayoutdoor@infiRay.com)

Web: [www.infiRayoutdoor.com](http://www.infiRayoutdoor.com)



[www.infiRayoutdoor.com](http://www.infiRayoutdoor.com)

InfiRay Outdoor • Saim SCL Series • Operating Manual



## Operating Manual

V1.1

**Saim SCL** | Thermal Imaging  
Riflescopes

SCL25W / SCL35W

## IMPORTANT SAFETY INFORMATION

### Environmental influences

**Note:** Never point the lens of the device directly at intense heat sources such as the sun or laser equipment. The objective lens and eyepiece can function as a burning glass and damage the interior components.

### Risk of swallowing

**Caution:** Do not place this device in the hands of small children. Incorrect handling can cause small parts to come loose which may be swallowed.

### Safety instructions for use

- Do not expose the device to fire or high temperatures.
- The battery capacity decreases when operated in a cold ambient temperature. This is not a fault and occurs for technical reasons.
- Always store the device in its carrying bag in a dry, well-ventilated space. For prolonged storage, remove the batteries.
- Do not expose your device to extreme temperatures lower than - 20°C and higher than + 50°C.
- The product shall only be connected to a USB Type C interface.
- If the device has been damaged or the battery is defective, send the device to our after-sales service for repair.

## User information on the disposal of electrical and electronic devices (private households)



The WEEE symbol on products and/or accompanying documents indicates that used electrical and electronic products must not be mixed with ordinary household waste. For proper treatment, recovery and recycling, take these

products to the appropriate collection points where they will be accepted without charge. In some countries, it may also be possible to return these products to your local retailer when you purchase a corresponding new product. The proper disposal of this product serves to protect the environment and prevents possible harmful effects on human beings and their surroundings, which may arise as a result of incorrect handling of waste.

More detailed information on your nearest collection point is available from your local authority. In accordance with state legislation, penalties may be imposed for the improper disposal of this type of waste.

## For business customers within the European Union

Please contact your dealer or supplier regarding the disposal of electrical and electronic devices. He will provide you with further information.

## Information on disposal in other countries outside of the European Union

This symbol is only applicable in the European Union.

Please contact your local authority or dealer if you wish to dispose of this product and ask for a disposal option.

## Intended use

The device is intended for displaying heat signatures during nature observation, remote hunting observations and for civil use. This device is not a toy for children.

Use the device only as described in this instruction manual. The manufacturer and the dealer accept no liability for damages which arise due to non-intended or incorrect use.

## Function test

- Before use, please ensure that your device has no visible damage.
- Test to see if the device displays a clear, undisturbed image.
- Check that the settings for the thermal imaging camera are correct. See the notes in the section Observation mode.

## Installing/removing the battery

The Saim thermal imaging rifle scope need to install two CR123 batteries for use. Refer to the section Battery Installation for details.

## Observation with and without glasses

Thanks to the flexible eyeshade, the Saim series can be used with or without glasses. It offers a full field of view in both cases.

## SPECIFICATION

Model	SCL25W	SCL35W
<b>Microbolometer</b>		
Resolution, pixels	384 × 288	
Pixel size, μm	17	
NETD, mk	≤40	
Frame rate, Hz	50	
<b>Optical Characteristics</b>		
Objective lens, mm	25, F1.0	35, F1.0
Field of view	14.9° × 11.2°	10.7° × 8°
Magnification, x	1.44 – 5.76	2.02 – 8.08
E-zoom, x	1 / 2 / 3 / 4	
Diopter Adjustment, D	-5 ~ +5	
Detection Range, m (Target size: 1.7mm0.5m, P(n)=99%)	917	1283
<b>Display</b>		
Display type	LCOS	
Resolution, pixels	1280 × 960	
<b>Power Supply</b>		
Battery type	CR123 × 2	
Max. Operation time (at t=22 C ), h*	3.5	
<b>Operational Characteristics</b>		
Wi-Fi & Recorder	√	
Max. Recoil Power on Rifled Weapon, g/s <sup>2</sup>	1000	
Built-in memory, Gb	16	
Operating Temperature Range, C	-10 ~ +50	
Weight (without batteries), g	< 420	
Dimension, mm	186 × 61 × 59	195 × 61 × 59
USB type	Type C	

- ★ The actual operating time depends on the intensity of using Wi-Fi, video recorder.
- Improvements may be made to the design and software of this product to enhance its useful features.
- Technical parameters of the device may be improved without prior notice of the customer.

## DESCRIPTION


The Saim series is a low-cost Thermal Imaging Riflescope, which can be mounted on various firearms for night hunting and target observation. Its compact size and lightweight design make it easy to carry. What makes it outstanding is long operation hours, good concealment and great ability to detect, recognize and identify objects or targets fast and easy. The Saim series effective at close and long ranges irrespective of light and harsh weather conditions, that is, in total darkness, through heavy smoke, haze, fog, and dust.

## COMPONENTS AND CONTROLS

1. Eyeshade
2. Eyepiece diopter adjusting ring
3. C (Camera) button
4. M (Menu) button
5. P (Power) button
6. Type C interface
7. Battery compartment
8. Lens focus ring
9. Objective lens
10. Lens cover



## BATTERY INSTALLATION

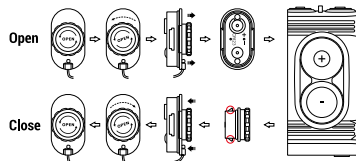












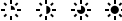













- Open the battery compartment cover (7) anticlockwise according to the prompt identification on the cover.
- Install the two CR123 batteries correctly according to the marking on the battery cover and inside it.
- When done, replace the battery cover - the latches from both sides of the cover will pull out (see the drawing above), press it until its clicking position - make sure the cover is closed on both sides correctly.
- Battery level is displayed on the status bar ( ).
- When the battery icon turns red, please replace the new battery in time.
- It is necessary to power off before replacing the batteries.


### Attention

- **Disposable batteries are ONLY supported!** Risks are existing to use rechargeable batteries due to nonstandard quality.
- Please do not use different types of batteries or batteries with different power levels.
- The Saim series supports external power supply via Type-C cable with a USB icon displayed on the screen.

## ICONS INSTRUCTIONS

	Image mode: <b>White hot</b>
	Image mode: <b>Black hot</b>
	Image mode: <b>Red hot</b>
	Image mode: <b>Color</b>
<b>×1/×2/×3/×4</b>	E-zoom
	Display brightness
	Image sharpness
	Ultraclear mode
	Wi-Fi
	Auto correction mode
	Video out
	PIP
	Battery type
	Zeroing type    
	More
	Zeroing
	Defective pixels calibration
	Time and date
	System information
	Factory reset
	Return to the Main Menu
	Battery indicator

## OPERATION

- Open the lens cover (**10**).
- **Power On:** Press and hold down the **P (5)** button for 3s to power the riflescope on. Waite for 6s until thermal image appears on the display.
- **Dioptr Adjustment:** Adjust the sharp resolution of the icons on the display by rotating the diopter adjusting ring (**2**) of the eyepiece.
- **Lens Focus Adjustment:** rotate the lens focus ring to focus (**8**) on the object being observed.
- **Calibration:** calibration the image with a short press of the **M (4) + C (3)** button for shutter correction or long press the **M (4) + C (3)** button for background correction.
- **Image Settings:** adjust the image mode, display brightness, image sharpness in the shortcut menu (for more details, see the **Shortcut Menu Functions** section)
- **Standby Mode:** Briefly press the **P (5) + M (4)** buttons at the same time to switch the device to the standby mode. Briefly press the **P (5) + M (4)** buttons again to wake up the device.
- **Power Off:** To power off the riflescope, long press **P (5)** button for 5s until the shutdown option menu appears, select the “√” to shut down and “x” to cancel.  
  
Then short press the **M (4)** button to confirm the selection.

- **Reticle On:** click the **M (4)** button four times in a row while pressing and holding the **P (5) + C (3)** button to invoke the reticle function for the first time use, then long press the **P (5) + M (4) + C (3)** button simultaneously for 7 seconds to turn the reticle on. This function should be activated when the reticle first enabled.

---

### Attention

- When the reticle is turned off, all the operations related to it in the menu will be hidden, including the adjustment of the reticle color and pattern (in shortcut menu), the options of zeroing and blind pixel correction in the advanced menu.

---


## ZEROING

Zeroing is recommended to be done at the temperature close to the riflescope operating temperature.

Before implementing zeroing setting, please make sure that the reticle is on and zeroing type is selected in the main menu.

- Mount the riflescope on your weapon.
- Set a target at 100m distance, and power on the riflescope.
- For the first use of the riflescope, please make sure that the reticle is on before zeroing (according to the instructions of section **Operation**).
- Long press the **M (4)** button on the home screen to enter the main menu.

- Select one zeroing profile in the main menu.
- Select the Zeroing item, and press the **M (4)** button to enter the Zeroing interface. In the Zeroing interface, the

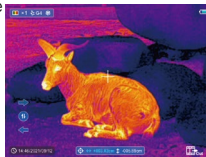

- reticle is shown as a small cross for position adjustment.
- Then aiming the center of the reticle at the bull's-eye 100 meters away and shooting.
- Locate the bullet hole after shooting.
- **If the bullet hole can be seen on the display screen:**
  - Keeping the position of the device fixed, press and hold the **M (4) + C (3)** button at the same time to freeze the image, and a snowflake icon appears on the upper-left corner of the screen.
  - Move the reticle to the position of the actual impact point by the **P (5) / C (3)** button.
  - Short press the **M (4)** button to switch the movement direction between UP-DOWN and RIGHT-LEFT.
  - Press and hold down the **M (4)** button to save and exit when the process is done.
- **If the bullet hole cannot be seen on the display screen:**
  - Keeping the position of the device fixed, measure the horizontal and vertical distance between the bull's eye and the bullet hole.
  - According to the measured distance, move the

reticle position by long or short pressing the P (5) / C (3) button until the distance marked on the scale plate consistent with the measured distance.



- Short press the M (4) button to switch the movement direction between UP-DOWN and RIGHT-LEFT.
- Press and hold down the M (4) button to save and exit when the process is done.

## Notes

- To ensure the accuracy of the position, aiming the bull's-eye again and repeat the operations until the bull's-eye is hit.
- In the zeroing interface, the reticle moves one pixel with a short pressing P (5) / C (3) button to the corresponding direction while ten pixels movement with a long-pressing. One pixel means to move 2.43cm at a distance of 100 meters or 0.87 inches at a distance of 100 yards.
- Short press the P (5) + M (4) + C (3) buttons at the same time to switch units (cm/m, inch/yard).
- In the zeroing interface, there is a white dot that represents the original position of the reticle before calibration implement.
- After zeroing, the center of all reticle will be changed accordingly.

## SHORTCUT BUTTONS INSTRUCTIONS

To quickly realize the frequently used functions, the Saim SCL series made the default shortcut buttons of the most commonly used functions in the observation interface.

Button	Short Press	Long Press
<b>P (Power) button</b> 	E-zoom	Power on /off
<b>M (Menu) button</b> <b>M</b>	Enter the shortcut menu	Enter the main menu
<b>C (Camera) button</b> 	Take a photo	Video recording
<b>M + C buttons</b>	Shutter correction	Background correction
<b>P + M buttons</b>	Turn the standby mode on/off	Turn the stadiametric rangefinder function on/off
<b>P + M + C buttons</b>	Switch the units between cm/m and inch/yard	—

## SHORTCUT MENU

The basic settings (digital zoom, display brightness, image palette, image sharpness, reticle color and reticle pattern) can be changed using the shortcut menu.

- In the home screen, short press the M (4) button to enter the shortcut menu.
- There are three pages and two functions on each page, one at the top and one at the bottom.
- On each page, press the P (5) button briefly to switch

the options of the top function, and press the **C (3)** button briefly to switch the options of the bottom function. And each function has four options

- Press the **M (4)** button briefly to switch the next page.

### Shortcut Menu Options and Descriptions


#### Times of pressing the M (4) button

#### Shortcut Menu

Enter the first page of the shortcut menu to adjust E-zoom and screen brightness

- Short pressing the **P (5)** button to select E-zoom parameter among x1, x2, x3 and x4.
- Short pressing the **C (3)** button to adjust the display brightness level from 1 to 4 gradually enhanced.

1 time

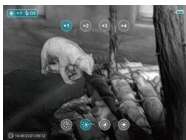


Enter the second page of the shortcut menu to adjust the image palette and image sharpness

- Short pressing the **P (5)** button to perform image mode setting-white hot, black hot, red hot and color.
- Short pressing the **C (3)** button to

2 time

adjust the image sharpness level from 1 to 4 gradually enhanced.

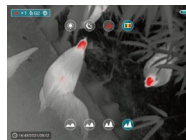

Enter the third page of the shortcut menu to adjust reticle color and reticle pattern When the reticle function is turned on

- Short pressing the **P (5)** button to adjust reticle color: white, black, red or green.
- Short pressing the **C (3)** button to select the reticle pattern. There are 8 patterns for selection.

3 time



4 time

Exit to the home screen

## MAIN MENU

- In the home screen, press and hold the **M (4)** button to enter the main menu, which including Ultraclear mode, Wi-Fi, auto shutter correction, video output, PIP, battery type, zeroing type, more.
- Press the **P (5) / C (3)** button to move through the main menu items.
- Press the **M (4)** button briefly to set up the item parameter or to enter the function interface.
- Long press the **M (4)** button to exit the main menu.



### Main Menu Options and Descriptions

- 👁️ **Ultraclear**—Turn Ultraclear mode on/off
  - Press and hold down the **M (4)** button to enter the Main Menu.
  - Select the **Ultraclear** menu option with the **P (5) / C (3)** button.
  - Turn Ultraclear mode on/off with a short press of **M (4)** button, along with the sound of shutter calibration.
  - The icon will be displayed on the status bar in the upper left corner of the screen when the Ultraclear mode is on.
  - Under heavy fog, rain or snow weather, Ultraclear Mode will show more image details.
- 📶 **Wi-Fi**—Turn Wi-Fi function on/off
  - Press and hold down the **M (4)** button to enter the

Main Menu.

- Select the **Wi-Fi** menu option with the **P (5) / C (3)** button.
- Turn Wi-Fi function on/off with a short press of **M (4)** button.
- The icon will be displayed on the status bar in the upper left corner of the screen when the wi-Fi is on.

### ⓐ **Auto shutter correction**—Turn the auto shutter correction on/off

- Press and hold down the **M (4)** button to enter the Main Menu.
- Select the **Auto Shutter Correction** menu option with the **P (5) / C (3)** button.
- Briefly press of the **M (4)** button to turn the auto shutter correction on/off.
- The icon will be displayed on the status bar in the upper left corner of the screen when the auto shutter correction is on.
- Before automatic calibration, there will be a 5 second countdown prompt behind the shutter icon on the status bar, that can be to cancelled this calibration during countdown with a short press of the **P (5)** button.



#### **Video Output**-Turn video output on/off

- Press and hold down the **M (4)** button to enter the Main Menu.
- Select the **Video Output** option with the **P (5) / C (3)** button.
- Briefly press of the **M (4)** button to turn video output on/off.
- The icon will be displayed on the lower right corner of the screen when the video output function is on.
- Video out function enable connectivity with an external display or recording device.

#### **PIP**-Turn Picture-in-Picture on/off

- Press and hold down the **M (4)** button to enter the Main Menu.
- Select the **PIP** option with the **P (5) / C (3)** button.
- Briefly press of the **M (4)** button to turn PIP on/off.
- When the PIP function is on, a small window will appear on the top of the display.

#### **Battery Type**-Select the battery voltage

- Press and hold down the **M (4)** button to enter the Main Menu.
- Select the **Battery Type** option with the **P (5) / C (3)** button.
- Briefly press of the **M (4)** button to select 3V or 3.7V according to the battery voltage.
- 3V is selected for dischargeable battery and 3.7V is for chargeable battery, but **dischargeable battery is suggested only.**

#### **Zeroing Type**-Select the zeroing type

- Press and hold down the **M (4)** button to enter the Main Menu.
- Select the **Zeroing Type** option with the **P (5) / C (3)** button.
- There are four types for selection.
- Briefly press of the **M (4)** button to select one zeroing type.

#### **More**-Enter the secondary menu for more settings

- Press and hold down the **M (4)** button to enter the Main Menu.
- Select the **More** menu option with the **P (5) / C (3)** button.
- Briefly press of the **M (4)** button to enter the secondary menu for more settings, including zeroing, defective pixels calibration, time setting, system information, factory reset and return to the main menu.



#### **Zeroing**-Enter the zeroing interface

Saim series support the 100m zeroing distance.

- Select the **Zeroing** option with the **P (5) / C (3)** button in the **More** submenu.
- Briefly press of the **M (4)** button to enter the



zeroing interface.


- Then aim the center of the reticle at the bull's-eye 100 meters away and shoot.
- Locate the bullet hole after shot.

Then, zero your device according to the section **Zeroing**.

### **+** Pixels Defect Calibration

Defect pixels are pixels that do not change brightness compare with others on the image, they are either brighter or darker than surrounding pixels. Saim series offer the possibility of removing any defective pixels on the sensor using software, as well as to cancel any deletion.

- Select the **PIXELS Defect Calibration** option with the **P (5) / C (3)** button in the **More** submenu.

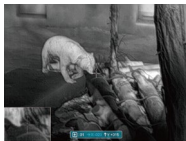

- Briefly press of the **M (4)** button to enter the pixels defect calibration interface.
- A small cross cursor instead of the reticle will appear on the center of the screen.
- The Picture in Picture (PIP) window will appear on the lower left corner of the screen. A tooltip is appeared on the bottom of the screen that displays the number of the blind pixels calibrated, the movement direction and location.
- Move the cursor to align with the defective pixel with a short or long press the **P (5) / C (3)** button.

Short press to move one pixel every time and long press to move ten pixels once.

- Switch the movement direction with a short press of the **M (4)** button.
- After selecting the blind pixel, long press **P (5) + C (3)** button to calibrate the defective pixel, and press the same button again for cancelation.
- Repeat the above processes until all blind pixels are calibrated.
- Press and hold the **M (4)** button to save the calibration and exit from the pixels defect calibration interface.

### **🕒** Time Setting—Reset the system date and time


- Select the **Time Setting** option with the **P (5) / C (3)** button in the **More** submenu
- Briefly press the **M (4)** button to enter the **Time Setting** interface.
- The order from left to right is year, month, day, hour and minute. And the time format is in 24-hours format.
- Switch among year, month, day, hour and minute with a short press of the **M (4)** button. The selected item will turn blue and two triangle icons will appear above and below the value.
- Select the correct value with a short press of the **P (5) / C (3)** button.
- Save settings and exit to the superior menu with a long press of the **M (4)** button.



- i System Information**-Show device information
- Select the **System Information** menu option with the **P (5) / C (3)** button in the **More** submenu.
  - The relevant information of riflescope will be shown by a short press of the **M (4)** button.
  - This item allows the user to view the following information about the riflescope: the product model, GUI version, SYS Info, Boot version, FPGA, PN and SN number of the riflescope, Hardware version.
  - Press and hold the **M (4)** button to return to the submenu.



- ↺ Factory Reset**-Reset to the Factory Settings
- Select the **Factory Reset** option with the **P (5) / C (3)** button in the **More** submenu.
  - A prompt box will appear on the screen with a briefly press of the **M (4)** button.
  - Short press the **P (5) / C (3)** button to select the option. The “√” is to reset to the default, and the “x” is to cancel.
  - Confirm the selection with a short press of the **M (4)** button and exit to the home screen.

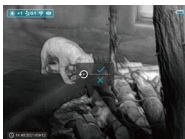

- ← Return**-Return to the main menu
- Select the Return option by **P (5) / C (3)** button.

- Short press the **M (4)** button to return to the main menu.

## PHOTOGRAPHING AND VIDEO RECORDING

Saim SCL series thermal imager is equipped with a function for video recording and photographing observed images onto the built-in memory card. The files of images and videos will be named after the time, so it is recommended to reset the system time in the **Main Menu – More - Time Setting** or to synchronize the system time and date in the Settings of the APP InfiRay Outdoor before using the camera and video function. Please download the APP operation manual from our official website for detailed operation steps.

### Photographing


- Take a photo with a short press of the **C (3)** button in the home screen.
- A camera icon (📷) shows in the upper-right of the screen and the image will freeze for 0.5s when the function performs.

### Video recording

- Press and hold the **C (3)** button in the home screen to start the video recording.
- A tooltip showing the recording time in MM: SS (minutes: seconds) format will appear in the upper right corner of the display.
- The red dot in the tooltip flashes during recording.
- During recording, short press the **C (3)** button to take

a photo also.

- Press and hold the **C (3)** button again to exit the recording when done.
- Video and picture files are stored in the built-in memory card after video recording has been turned off.
- (Note that the video will not be saved if you skip the process and shut down the device suddenly instead). The photos and videos can be read on the computer via the USB cable.

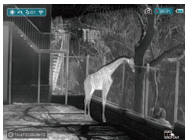

---

## Note



- You can enter and work on the menu during video recording.
- The recording time is accumulated in minutes until the recording stops, that is, the time shows 60:00 after 59:59.
- The maximum duration of a video recording file is 10 minutes. When it's more than 10 minutes, the video will be recorded onto a new file.
- The number of files is limited by the capacity of the device's built-in memory. Regularly monitor the amount of free memory in the built-in memory card, transferring footage and photos to other media to free up space on the memory card.

---

## Memory Access


When the device is turned on and connected to a computer, it is recognized by the computer as a flash

memory card, which is used to access the device's memory and make copies of pictures and videos.

- Turn on the device and connect it to the computer through the USB cable.
- Double-click "my computer" on the desktop - double-click to open the device named "Infiray"  - then click and open the device named "Internal Storage"  to access memory.
- There are different folders named by time in memory.
- Recorded videos and photographs are saved in these folders in the format: IMG\_HHMMSS\_XXX.jpg (for photos) and VID\_HHMMSS.mp4 (for video). HHMMSS- hour/minute/ second, XXX - three-digit common file counter for photos which is NOT reset.

## STADIAMETRIC RANGEFINDER

- In the home screen, press and hold the **P (5) + M (4)** buttons at the same time to enter the stadiametric ranging interface, and two horizontal lines will appear on the upper and lower positions of the cursor.
- Adjust the horizontal lines to the target position by the **P (5) / C (3)** button.
- The icon on the left shows the approximate distance of the corresponding target.
- Long press the **M (4)** button to exit to the stadiametric ranging interface.

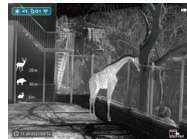

## PIP FUNCTION

- In the home screen, press and hold down the **M (4)** button to enter the Main Menu.
- Select the **PIP** option with the **P (5) / C (3)** button.
- Briefly press of the **M (4)** button to turn PIP on/off.
- When the PIP function is on, a small window will appear on the top of the display.
- The image in the small window is a 2x magnified image centered by the reticle center.
- When the main image is enlarged through the shortcut menu, the PIP image will be enlarged 2x synchronously.




## Wi-Fi FUNCTION


The device is equipped with wireless communication with external devices (computer, smartphone) via Wi-Fi.

- In the home screen, press and hold the **M (4)** button to enter the menu.
- Select the **Wi-Fi** option with the **P (5) / C (3)** button.
- Briefly press of the **M (4)** button to turn Wi-Fi on.
- The device is recognized by an external device under the label 'Saim\_xxxxx-xxxxxx', xxxxx-xxxxxx is the SN code of the device.

### Set Wi-Fi name and password

The Wi-Fi name and password of your device can be set in the APP.

- Click the "setting" icon  in the APP to enter the setting interface.
- In the text box, enter and submit the name (SSID) and password of the new Wi-Fi.
- It needs to restart the device to take the new name and password effect.
- The initial password is 12345678.
- And then, the device can be controlled through the APP InfiRay Outdoor.
- Enter the password on an external device, and establish a connection.

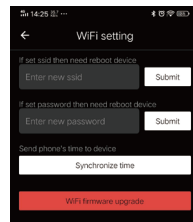


## UPDATE AND APP TECHNOLOGY

In order to continuously improve the product performance and provide better user experience, the software program, as well as parameters and operating instruction of the device will be constantly updated. Users can go to the official website ([www.infirayoutdoor.com](http://www.infirayoutdoor.com)) to download and update.

The Saim series support APP technology, and can be connected to a smartphone or tablet PC via Wi-Fi for real-time image transmission, control operations, and program updates.

## About InfiRay Outdoor

- You can download and install the **InfiRay Outdoor** app on [www.infiray-outdoor.com](http://www.infiray-outdoor.com) or App store. Otherwise, you can download the app by scanning the QR code.  

- When installation completed, open **InfiRay Outdoor** application.
- If your device is already connected with a mobile device, please switch on the mobile data in mobile device. After connection, the update detection is performed automatically with a prompt in the application. Click '**Now**' to download the updates or click '**Later**' to update later.
- **InfiRay Outdoor** will automatically store the last connected device. So, if your device has not connected with your mobile device, but linked to **InfiRay Outdoor** before, the update prompt will appear if there is an update when turning on **InfiRay Outdoor**. You can download the update first via mobile Wi-Fi and then connect your device with mobile device to finish the update.
- After finishing the update, the device will root.
- Instructions for using **InfiRay Outdoor** can also be downloaded from the official website.

## TECHNICAL INSPECTION

A technical inspection of the device is recommended before use.

- Check the external appearance of the device (there should be no cracks in the casing).
- Check the condition of the lens and eyepiece (there should be no cracks, greasy spots, dirt or other deposits)
- Check the condition of the rechargeable battery (this should be charged) and the electrical contacts (there should be no presence of salts or oxidation).

## MAINTENANCE

Maintenance should be carried out at least twice a year and consist of the following actions.

- Wipe the external surfaces of metal and plastic parts free of dust and dirt with a cotton cloth. Silicone grease maybe used for this.
- Clean the electrical contacts of the battery and battery slot on the unit using a non-greasy organic solvent.
- Check the glass surfaces of the eyepiece and the lens. If necessary, remove dust and sand from the lenses (preferably using a non-contact method).
- Cleaning of the external surfaces of the optics should be done with substances designed especially for this purpose.

## LEGAL AND REGULATORY INFORMATION

Wireless transmitter module frequency range:

**WLAN: 2.412-2.472GHz (For EU)**

Wireless transmitter module power<20dBm (only for EU)



IRay Technology Co., Ltd. thus declares that the Saim SCL series thermal imaging rifle scope complies with the directives 2014/53/EU and 2011/65/EU. The full text of the EU declaration of conformity as well as additional information are available at: [www.infray-outdoor.com](http://www.infray-outdoor.com).

This device may be operated in all member states of the EU.

### FCC Statement

**FCC ID: 2AYGT-251-2 (SCL25W)**

**2AYGT-252-2 (SCL35W)**

#### Labeling requirements

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### Information to the user

Any Changes or modifications not expressly approved by

the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

### Body-worn Operation

This device was tested for typical body-support operations. To comply with RF exposure requirements, a minimum separation distance of 0.5cm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.

We, iRay Technology Co., Ltd., hereby declare that this product was tested conforming to the applicable FCC rules under the most accurate measurement standards possible, and that all the necessary steps have been taken and are in force to assure that production units of the same equipment will continue to comply with the Commissions requirements.